

# ATS1111

## Teclado LCD 4x16 Carateres, 16 Áreas - ATS Classic

### Remote Arming Stations

---

The ATS 1111 is part of the Remote Arming Station family for the advisor MASTER security system. The RAS family consists of a range of keypads and card readers which can be used in different environments, in and out-door. The ATS1111 can be used for configuration and management of the system, as well as for opening doors and arming/disarming areas. In an easy way, the ATS1111 gives a status overview from your security system with both visual and audio indicators.

### Large LCD Display

---

The ATS1111 is a modern ergonomic design and has a clearly readable text on a 4 x 16 characters LCD for displaying system programming, alarm and access control functions. This enhances the ease of use of the keypad for programming and controlling the advisor MASTER control panel. The viewing angle of the display is adjustable via the keypad as well as the volume level of the built-in buzzer. Four arrow keys will navigate the user easily through the programming and operational features and 6 additional functions key will complete this user-friendly interface.

### Indications

---

Four status LED's will continuously update the user on mains condition, faults, access control and alarms.

Green - Power LED is on when the control panel is powered by the AC supply.

Yellow - Fault LED illuminates to indicate detection of a system fault.

Blue - Access LED flashes when access to an area assigned to the RAS is granted.

Red - Alarm LED illuminates when there is a system tamper or an area assigned to the RAS is in alarm state.

The Arming Station can display the status of 16 areas using 16 LED's on the front, while the LCD shows details of alarms or a pre-programmed text.

The area may be identified by viewing the 16 area LEDs visible when the RAS cover is open or removed and the indications are as follows:

- The LED illuminates when its corresponding area is armed.
- The LED flashes slowly when a fault is detected.
- The LED flashes quickly when an alarm occurs.

### Mounting

---

The RAS cover is hinged at the bottom. To open, grasp the cover at the sides or the top and pull gently — the cover will swing down on its pins. The cover may be fully removed by gently prising one of the pins away from the body of the RAS and pulling. The metal mounting plate at the rear is held by a locking screw.



### Detalhes

---

- 4 x 16 characters LCD
- user adjustable buzzer
- user adjustable LCD contrast
- 16 Area indication
- door release indication

# ATS1111

## Teclado LCD 4x16 Carateres, 16 Áreas - ATS Classic

### Especificações técnicas

---

#### Geral

Interface utilizador	2 x 16 Char LCD, Teclas
Linha de produto	ATS Master
LEDS de Estados	16
Leitor integrado	Proximidade

#### Sistema

Tipo de endereçamento	DIP Switches
Tipo de cabo suportado	WCAT52 / WCAT54 or equivalent

#### Comunicação

Tipo de Comunicação	Fio
---------------------	-----

#### Entradas / saídas

Entradas	1
Tipo de entrada	Request to Exit
Saídas	1
Tipo de saída	50 mA Max (open collector at 15 VDC Max)

#### Elétrica

Tensão de operação	9 - 14 VDC Max
Consumo de corrente	26 mA typical 95 mA max

#### Físico

Dimensões físicas	92 x 165 x 25,4 mm
Cor	Branco
Fator de forma	Vertical
Cobertura	Cobertura Flip
Tipo de montagem	Montagem em superfície

#### Ambiental

Temperatura de operação	0 to +50°C
Humidade relativa	0 to 95% non-condensing
Ambiente	Interior
Classificação IP	30

#### Regulamentação

Grau EN50131	Grau 2
Conformidade	CE, RoHS



Como empresa de inovação, a Carrier Fire & Security reserva o direito de alterar as especificações do produto sem aviso prévio. Para obter informações sobre as especificações mais recentes do produto, visite [pt.firesecurityproducts.com](http://pt.firesecurityproducts.com) online ou contate o departamento comercial.

Last updated on 5 May 2023 - 9:32