



Video Doorbell

Quick Guide

Models:

- DB-320WIPN

1) Table of Contents

1)	Terms & Conditions	3
2)	Initial Setup	5
3)	Camera Activation	5
4)	Binding	6
5)	Sharing	7
6)	Remote Access	8
6.1)	LAN	8
6.1.1)	Access through the IP Manager Tool.....	8
6.1.2)	Direct Access through Web-Browser	9
6.1.3)	WiFi Configuration.....	10
7)	RFID Key-Fob registration	11
8)	PR-CHIME Pairing (Optional)	11
9)	PR-CHIME Settings (Optional)	11
10)	Push Notifications	12
11)	Wiring	13

1) Terms & Conditions

- We strongly advise users to read this manual and keep it for later use for proper and safe device usage.
- Please use the provided & authorized by Provision-ISR technician power supply and power source indicated on the marking label. The power voltage must be verified before use.
- Avoid improper operation, shock vibration, and heavy pressing that can cause product damage.
- Do not use corrosive detergents when cleaning. When necessary, please use a soft dry cloth to wipe the dirt off; use neutral detergents for problematic pollution & decay. Any cleanser for high-grade furniture is applicable.
- Keep away from heat sources such as radiators, heat registers, stoves, etc.
- Do not try to repair the device without technical aid or approval.
- For camera installations:
 - Avoid aiming the camera directly towards extremely bright objects, such as the sun, which may damage the image sensor.
 - Please abstain from reversing the camera. This will result in an inverted image. Please follow the instructions for proper camera installation.
 - Do not operate the camera in extreme temperatures or extreme humidity conditions.
- For Recorder & server installations:
 - Do not block any ventilation openings and ensure proper airing around the device.
 - Perform a safe shutdown before disconnecting from power. Otherwise, HDD damage and configuration loss might occur.
 - This device is for indoor use only.
 - Do not install this device near water, nor expose it to rainy or moist environments. If any solids or liquids get inside the device's case, turn the device off immediately and have it checked by a qualified technician.
- The instructions in this manual are suitable for all models running Ossia OS. Models which do not support any of the features will have explicit markings.
- For devices with internal power supply, please ensure that the AC 220/110V input selector is set correctly.
- There may be incorrect info or printing errors in this manual. PROVISION-ISR reserves the right to change this manual and publish the revision online on our website (www.provision-isr.com); there may be inconsistencies with the latest



version, which apply to any software upgrades and product improvements, interpretation and modification added. Updates and corrections are subject to change without notice.

- All pictures and examples used in the manual are for reference purposes only.
- When this device is in use, the relevant contents of Microsoft, Apple and Google are involved. The ownership of trademarks, logos, and other intellectual properties related to Microsoft, Apple, and Google, belong to the companies mentioned above.


2) Initial Setup

The initial connection should be done using **Ethernet Cable**. Make sure the camera got an IP address from the router, and that it is connected to the internet

3) Camera Activation

The camera's default state is "Inactive". This means that the camera must be activated before it can be used. The camera can be activated by 3 methods:

- ❖ IP Manager Tool: Select the camera(s) you wish to activate, set the new admin password and click activate (Note: the activation password must contain at least 8 characters and include 1 letter, 1 number, and 1 special character). After setting the password, you will have to set the answer to 3 recovery questions of your choice. These recovery questions can be used in case you have lost the admin password you have set.

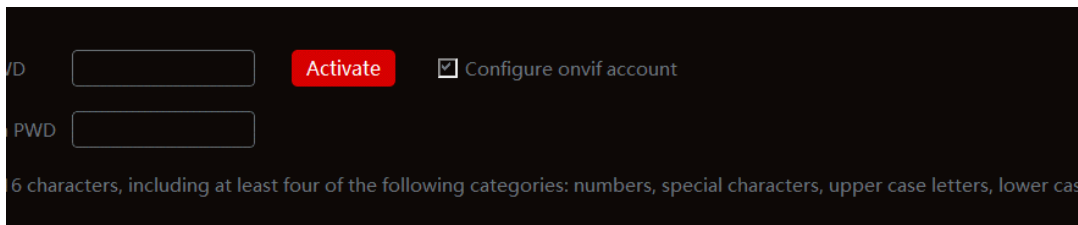

- ❖ Logging into the camera web page: When browsing to the camera for the first time, you will be prompted to activate it. Use credentials admin/123456 for the first login, then you will be prompted to set the new admin password and click activate (Note: the activation password must contain at least 8 characters and include 1 letter, 1 number, and 1 special character). After setting the password, you will have to set the answer to 3 recovery

 A screenshot of a 'Device Activate' dialog box. The title is 'Device Activate'. It contains three input fields: 'User Name' with the value 'admin', 'New Password' (empty), and 'Confirm Password' (empty). Below the 'New Password' field is a note: '8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.' There is a checkbox labeled 'Activate ONVIF User' which is checked. At the bottom center is an 'OK' button.


questions of your choice. These recovery questions can be used in case you have lost the admin password you have set.

- ❖ Setting the camera on an NVR: Once set on an NVR, the IPC will be activated automatically.


4) Binding

Important: Binding can be done only **AFTER** an account was created on CAM2 app.

1. Go to System > Basic Information

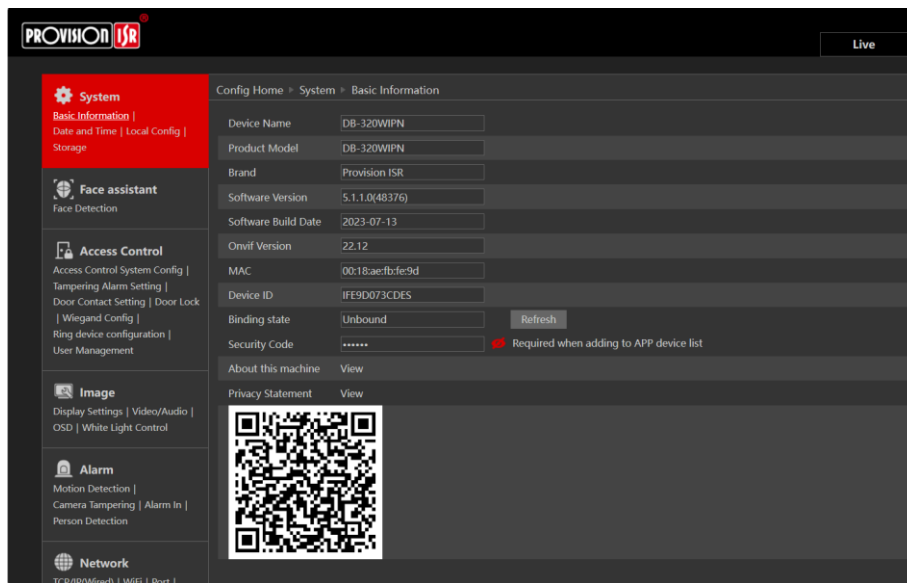


2. Make sure you have the **latest FW** installed.
3. Open the Provision CAM2 mobile app and add the doorbell by scanning the QR code

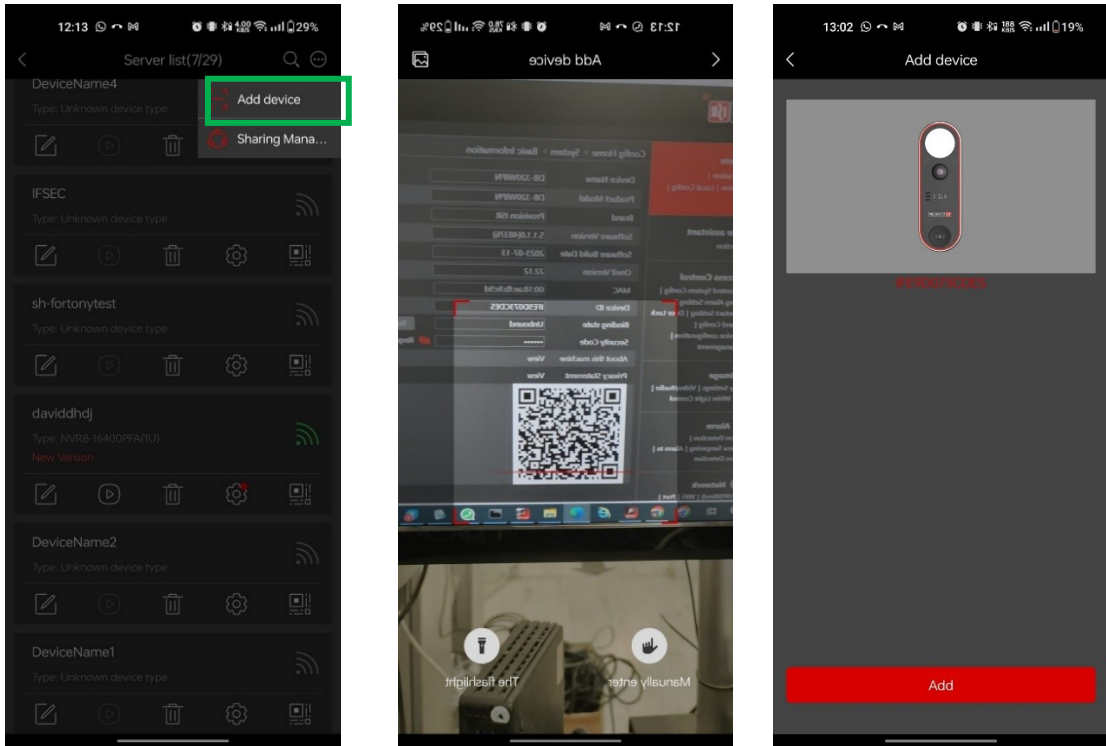

5) Sharing

You can share the doorbell device to other account holders using Provision Cam2 App.

1. Click on the “Share” Button in the server list.
2. Enter the account name you want to share with.
3. Choose if to allow live preview & playback or live preview only.

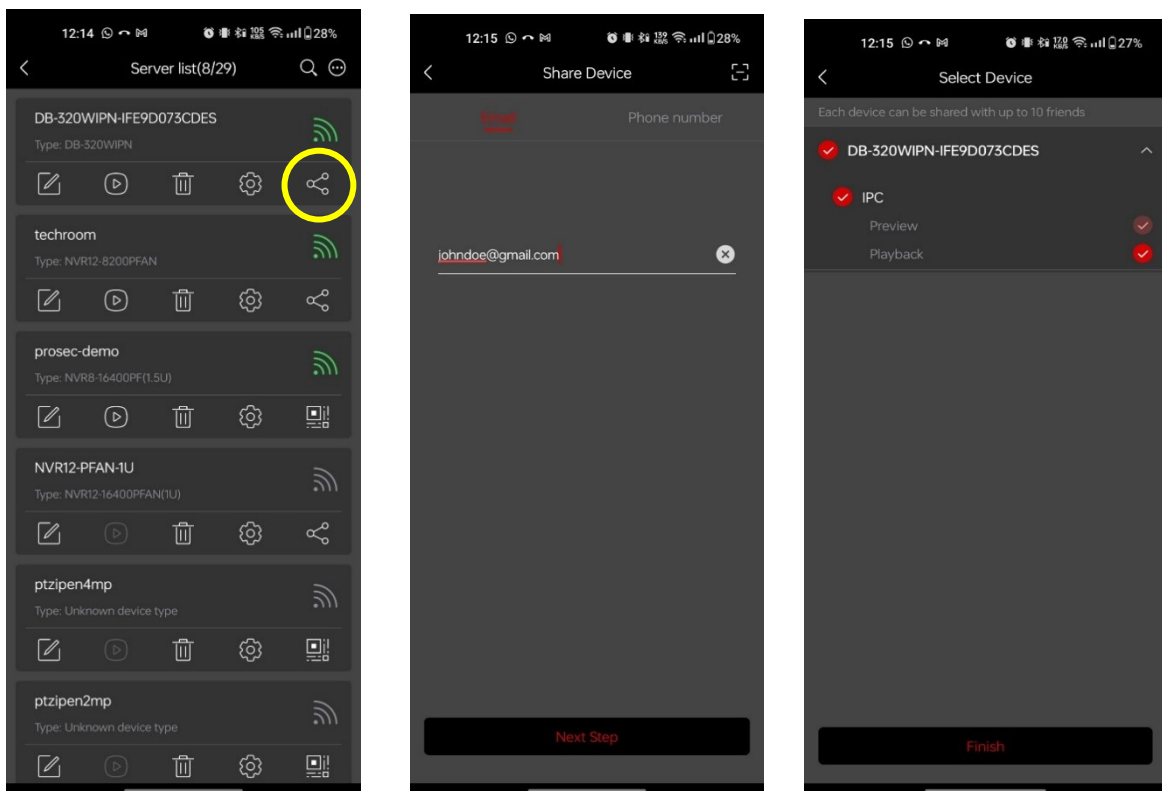

6) Remote Access

Cameras running FW version >5.1.1 support all modern browsers (Chrome, Firefox, Safari, Opera, Edge), and can also work on Edge in IE mode.


6.1) LAN

In LAN, there are two ways to access IPC:


1. Access through IP Manager Software.
2. Direct access through IE browser.

6.1.1) Access through the IP Manager Tool

- ❖ Make sure the PC and IPC are connected to the LAN and that the IP Manager is installed on the PC. You can download the IP manager from [here](#).
- ❖ Double-click the IP-Manager icon on the desktop to run this software.

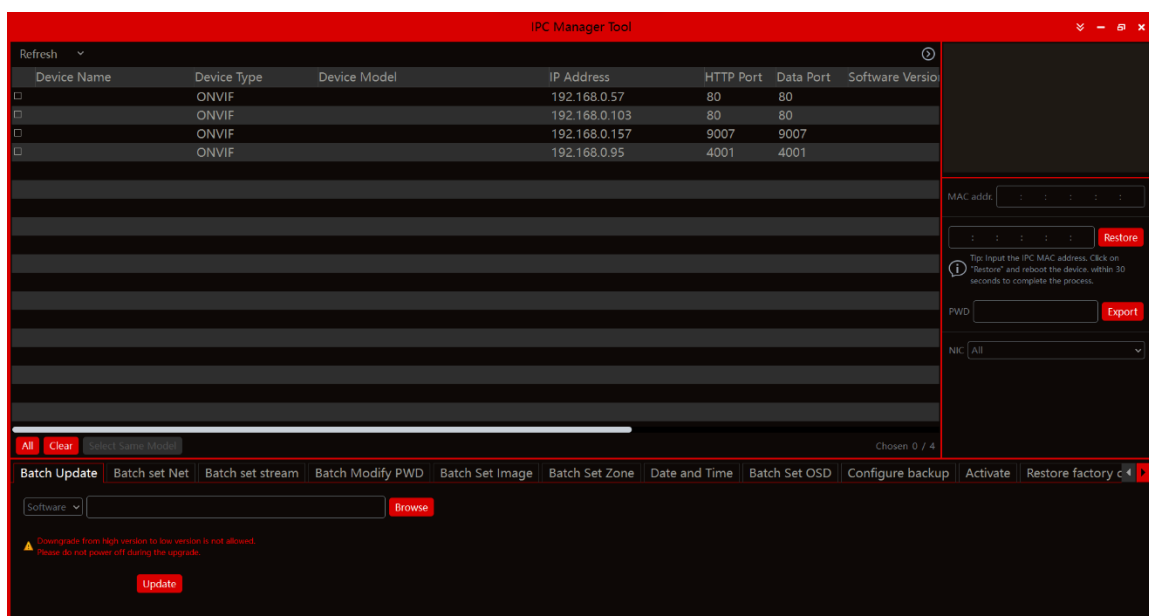

- ❖ Modify the IP address. The default TCP/IP setting of this camera is set to DHCP so the address is not fixed. If no DHCP server is available on your network, the camera setting will change to “fixed IP” with the address 192.168.226.201. Tick all the cameras you wish to set and then click on the “Batch Set NET” tab. If you wish to set static IP addresses, choose “Use the following IP Addresses”, set the range of IP addresses you wish to assign (First and last address), set the gateway and subnet mask, and click batch set. Wait for a few moments until the IP manager will configure the cameras. After configuration, the IP addresses of the cameras will refresh automatically.

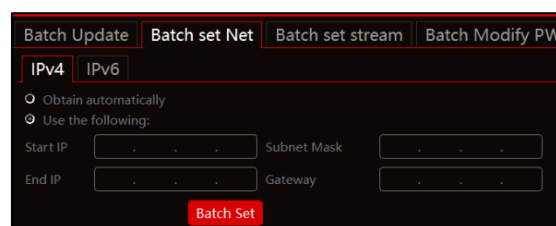


Please note:

- ❖ The IP range must fit the number of chosen cameras.
 - ❖ The selected IP addresses in the specified range must be available.
-

For example, if the IP address of your computer is 192.168.1.4, then the IP address of the cameras should be changed to 192.168.1.x. (x stands for any number between 1 and 255).

- ❖ Double-click on the IP address of the device you want to connect to. The system will automatically open a browser and connect to the IPC. A login window will appear as shown below.



The screenshot shows the login page for a PROVISION ISR IPC. The page has a grey header with the logo. On the left, there is a graphic of a camera and a globe with the text 'IPC' below it. On the right, there is a login form with the following fields and options:

- Name: admin
- Password: Password
- Stream Type: 2592x1520 25fps (dropdown menu)
- Language: English (dropdown menu)
- Remember me
- Login button

Input the username and password to log in.

6.1.2) Direct Access through Web-Browser

In case there is no DHCP server available in the network, the default network settings will be as shown below:

IP address: 192.168.226.201

Subnet Mask: 255.255.255.0

Gateway: 192.168.226.1

HTTP: 80


Data port: 9008

You may use the above default settings when you log in to the camera for the first time.

6.1.3) WiFi Configuration

After the DB is up and running, you can go to the WiFi settings of the DB:

1. Go to Network > WiFi
2. Enable WiFi, and press “search”
3. Choose your WiFi network, and provide the proper password below.

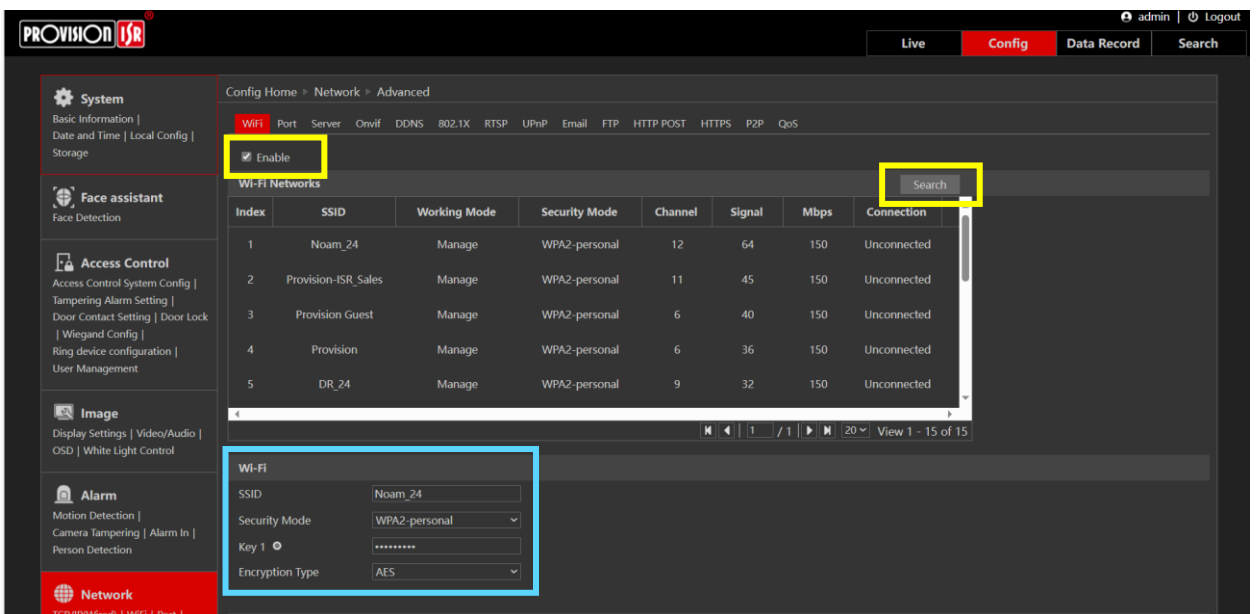

4. Set the WiFi IP configuration below

The screenshot shows the LAN configuration form. The 'Use the following IP address' option is selected. The IP Address is 192.168.1.201, Subnet Mask is 255.255.255.0, Gateway is 192.168.2.1, Preferred DNS Server is 8.8.8.8, and Alternate DNS Server is 8.8.8.8. A 'Save' button is visible at the bottom right.


5. Press “Save”
6. Once complete, the device will connect.

Please note:

- ❖ WiFi will be used **ONLY** after the Ethernet cable has been disconnected.

7) RFID Key-Fob registration

The DB-320WIPN package contains 3 RFID Key Fobs. They are not pre-configured on the device and has to be set up in order to work.

1. Access the device web page using the configured IP, port, username and password.
2. Browse to Settings→Access Control→User Management
3. Click on the “Add User”  Icon
4. Set the List Type to “Allow List” (Default)
5. Input the name
6. Click on the “Card NO.” field (Do not input any data)
7. Present the RFID Key Fob to the DB-320WIPN. You will hear an audio prompt “Badge read correctly” and the Key fob number will be filled automatically.
8. Click on Entry to save.
9. If you need to add additional Key Fobs, repeat steps 3-8

If additional Key Fobs are needed, the RFID protocol is Mifare 13.56MHz. Please make sure that the Key Fob you purchase has a number burnt on it.

8) PR-CHIME Pairing (Optional)

If you have purchased the optional PR-CHIME chime box, you will need to bind it first.

1. Open the PR-CHIME device and set the batteries. (Notice the polarity)
2. Click and hold the “Cog wheel” button on the PR-CHIME for 5 seconds (Or until you hear a “Ding Dong” and the LED indicator is flashing red).
3. Click and hold on the DB-320WIPN “Ring” button for 5 seconds (Or until it will slowly flash in blue color).
4. Once paired, the light will turn of and the chime will “Ding Dong” again.

9) PR-CHIME Settings (Optional)



The PR-CHIME ringtone and volume can be set using the PR-CHIME buttons. Once paired with a DB-320WIPN doorbell, the PR-CHIME can also be configured via the DB-320WIPN web interface through Settings→Access Control→Ring Device Configuration.

Through this interface you can also set the DND times (Do Not Disturb).

10) Push Notifications

Both the bound user and his shared accounts can choose which push notifications they want to receive.

1. Go to main menu (Top right icon)
2. Click on "Push Notification Settings"
3. Click on the Doorbell camera
4. Choose your preferred notifications.

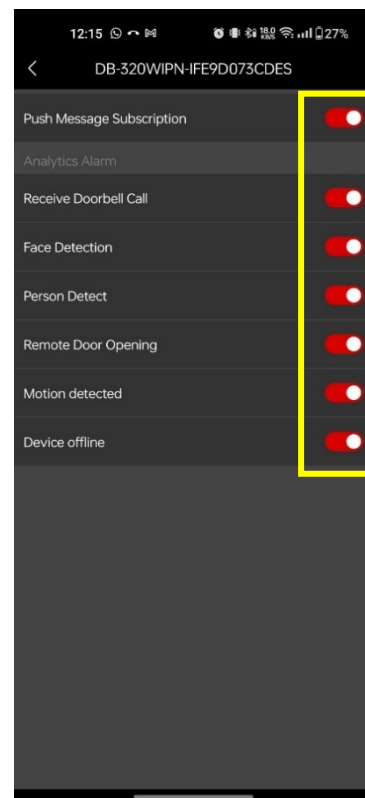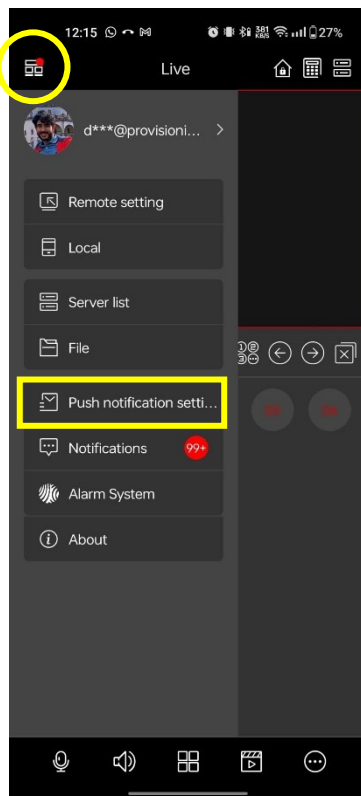

11) Wiring

Video Doorbell Quick Start Guide



Use your phone to scan the QR code to download the mobile APP

Use the mobile APP to scan the QR code to quickly add the camera

About This Manual

All pictures, images, icons and snapshots in this manual are for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail. The manual will be updated according to the product improvement and are subject to change without prior written notice. Legal Disclaimer

To the maximum extent permitted by applicable law, the product described, with its hardware, software, software and firmware, is provided "as is", with all faults and errors, and our company makes no warranties, express or implied, including particular purpose, and non-infringement of third party, in no event will our company, offices, or agents be liable to you for any special, consequential, incidental, or indirect damages, including, among others, damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if our company has been advised of the possibility of such damages.

With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be responsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, our company will provide timely technical support if necessary.

During the use of the device, please strictly abide by applicable law. In the event of any conflicts between this manual and the applicable law, the latter prevails.

Installation and Use

Please use our product according to the following safety instructions and warnings.

Do not place the camera in extremely hot, cold, dusty or damp location.

Do not expose it to high electromagnetic radiation.

If the product does not work properly, please contact your dealer or the nearest service center.

Never attempt to disassemble the camera yourself. (We shall not be responsible for any problems caused by unauthorized repair or maintenance.)


Do not drop the camera or subject it to physical shock.

Keep away from liquids while in use.


Do not touch the screen with sharp objects.

If cleaning is necessary, please use clean cloth to wipe it gently, avoiding water or alcohol.


1 Package

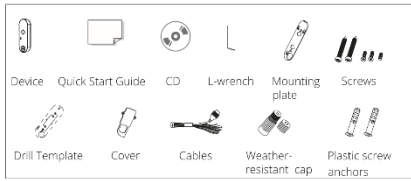

2 Overview

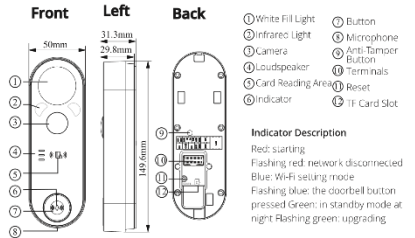

3 Cable Connection

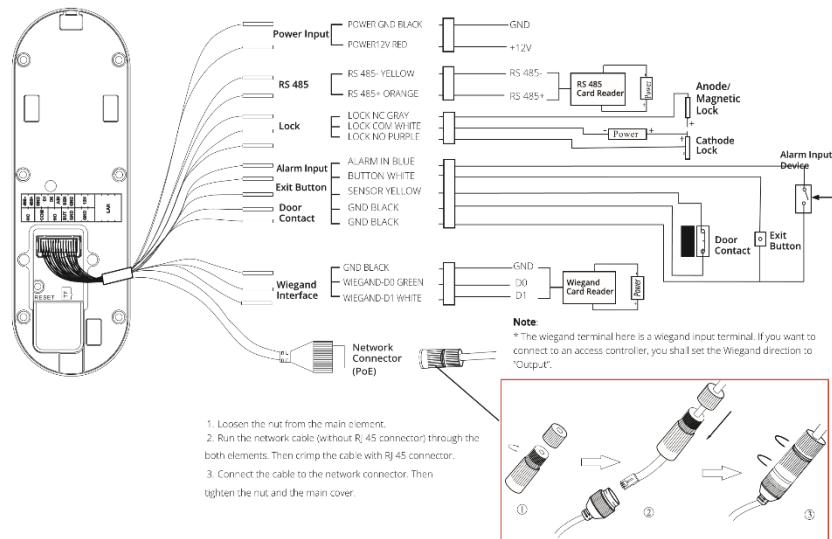

Provision-ISR

11 Atir Yeda St, Kfar Saba,
 Israel

Postal Code: 4442510

Tel: (972-9) 741 7511

Web: www.provision-isr.com