


# User Quick Guidelines for iRIS8 Addressable Fire Alarm Panel


## FIRE Event in the System

FIRE ALARM Indication

Activated Sounders


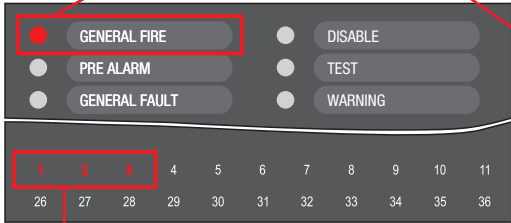


FIRE ALARM Message

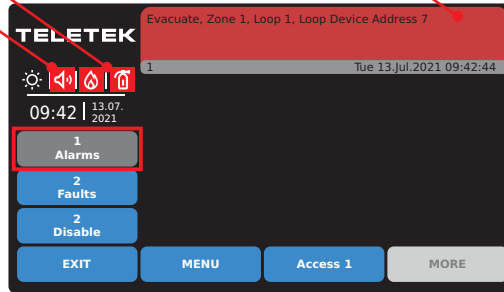


FIRE alarm in the zones

### 1 FIRE ALARM EVENT, time delay set for Sounder, Fire and Fire Protection outputs Turn off the buzzer:

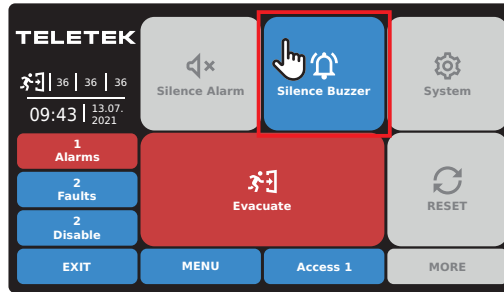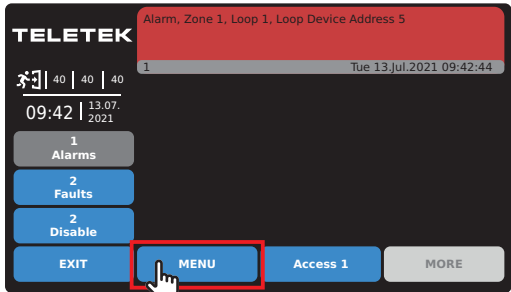

In case of Operation in Network, turn off the buzzer as choose:

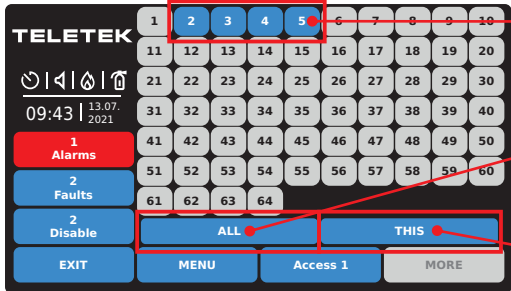


Select Panel Number 1-64, press an active button for a single panel in the Network,

or

Select ALL available panels in the Network,



or

Select only THIS concrete panel.

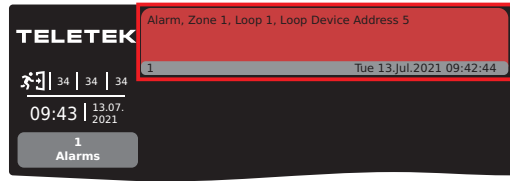


Go to the zone with fire alarm event and check for a real presence of FIRE, then follow **Step 2 - Start Evacuation,** and/or **Step 3 - Stop Sounders,** according the situation.

### 2 REAL FIRE ALARM, time delay set for Sounder, Fire and Fire Protection outputs Start Evacuation:

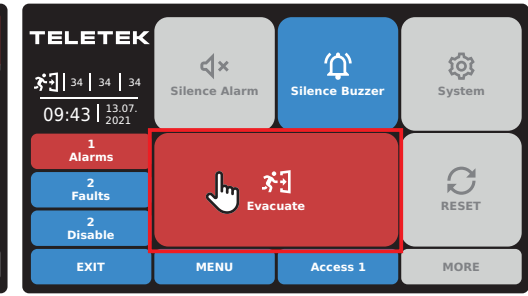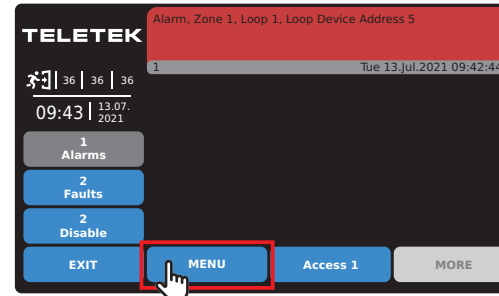

In case of Operation in Network, start Evacuation as choose:

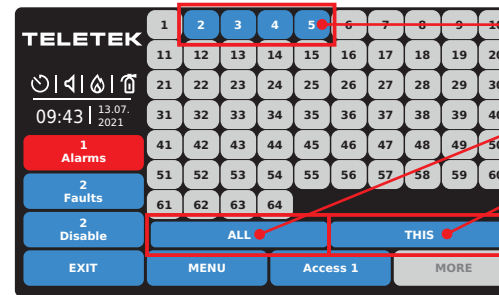

Select Panel Number 1-64, press an active button for a single panel in the Network,

or





Select ALL available panels in the Network,

or

Select only THIS concrete panel.



### 3 Turn off sounders and Reset:

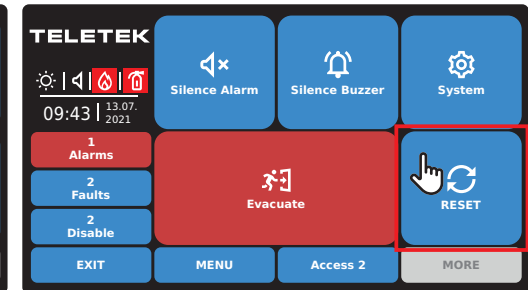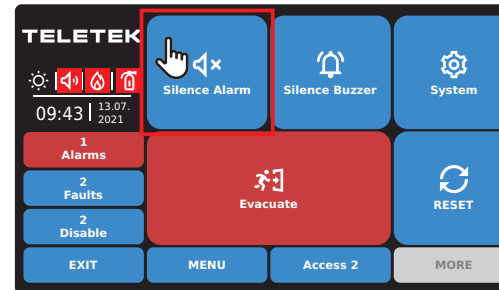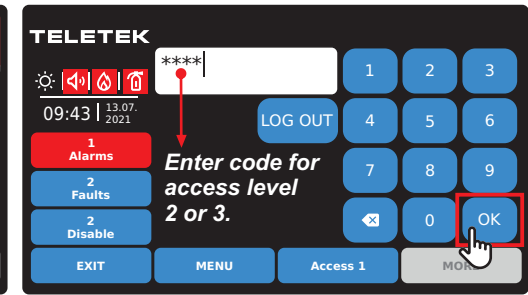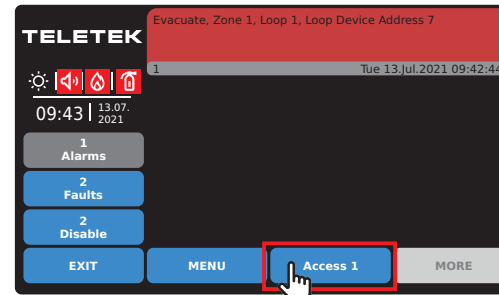

In case of Operation in Network, choose the panels, where to perform Turn off Sounders.

The panel is reset to Normal operation mode. Press **Access 2** , then **LOG OUT** .