

User Quick Guidelines for iRIS8 Addressable Fire Alarm Panel

Zone TEST

NOTE: The Messages for running tests in the system are with the lowest priority and they are not displayed automatically from the panel!

Active Test Indication

Messages for Zones in Test

Number of Zone in Test

Button sequence for ZONE testing:

1

Code for ACCESS LEVEL 2 or 3

2

3 Select the zones for testing. To test all zone numbers, press the "Select all" button. Press Up/Down buttons to review the rest zone numbers. Press "Test" to start.

4 Go to the zones in test and activate the installed detectors to check the system for proper work and efficiency. 5

Button sequence to exit the ZONE testing:

5

DISABLE Introducing

NOTE: The DISABLE Messages for events are with high priority but they are not displayed automatically from the panel!

Indication for DISABLEMENT

Button sequence for DISABLE introducing:

1

Code for ACCESS LEVEL 2 or 3

Button sequence for ZONE DISABLE:

2

Select the zone for disabling.

3 The zone is disabled.

Button sequence for OUTPUTS DISABLE:

2

Choose an output to disable: Sounder; Fire Brigade; Fire Protection; Fault Output; Relay 1-4.

3 The output is disabled.

You can disable several outputs at the same time.

Button sequence for LOOP DEVICES DISABLE:

2 Select the address of the device.

3 The loop device is disabled

Enabling of ZONES, OUTPUTS and LOOP DEVICES:

1 2 3 The Zone/Output/ Loop Device is enabled.