



GLOBAL
FIRE EQUIPMENT

J-NET-IP
Juno Net
Internal Printer

DATA SHEET
&
INSTALLATION
MANUAL


This 40 column internally mounted thermal printer provides a hardcopy of the Juno Net panel log containing all relevant events occurring in the system.


All events are date and time stamped and are backed by a 2000 events deep rolling log kept in the panel's non-volatile memory.

Note: in order for the printer to work properly it is necessary that the J-NET-QUART chip be installed on the Juno Net main board. Please refer to the panel's installation for full details.

Supply Voltage	5 V DC
Current Consumption	50 mA – standby 250 mA – printing @25 °C
Interface	TTL logic levels 2 @ 1200 bps – hardware handshake (Printer Busy Signal)
Printer Mechanism	Thermal Character Printer – 40 column
Printer-to-Main Board Connector	5-way straight polarised MOLEX type connector. Flat cable assembly provided with mechanism.
Dimensions	145.0 (W) x 45.0 (D) x 65.0 (H) All dimensions in mm
Weight	121 grams (Internal Printer Assembly) 208 grams (including paper roll)

Warning: Disconnect all power sources including primary (electrical mains) and secondary (batteries) supplies, before connecting or disconnecting these any internal circuit boards.

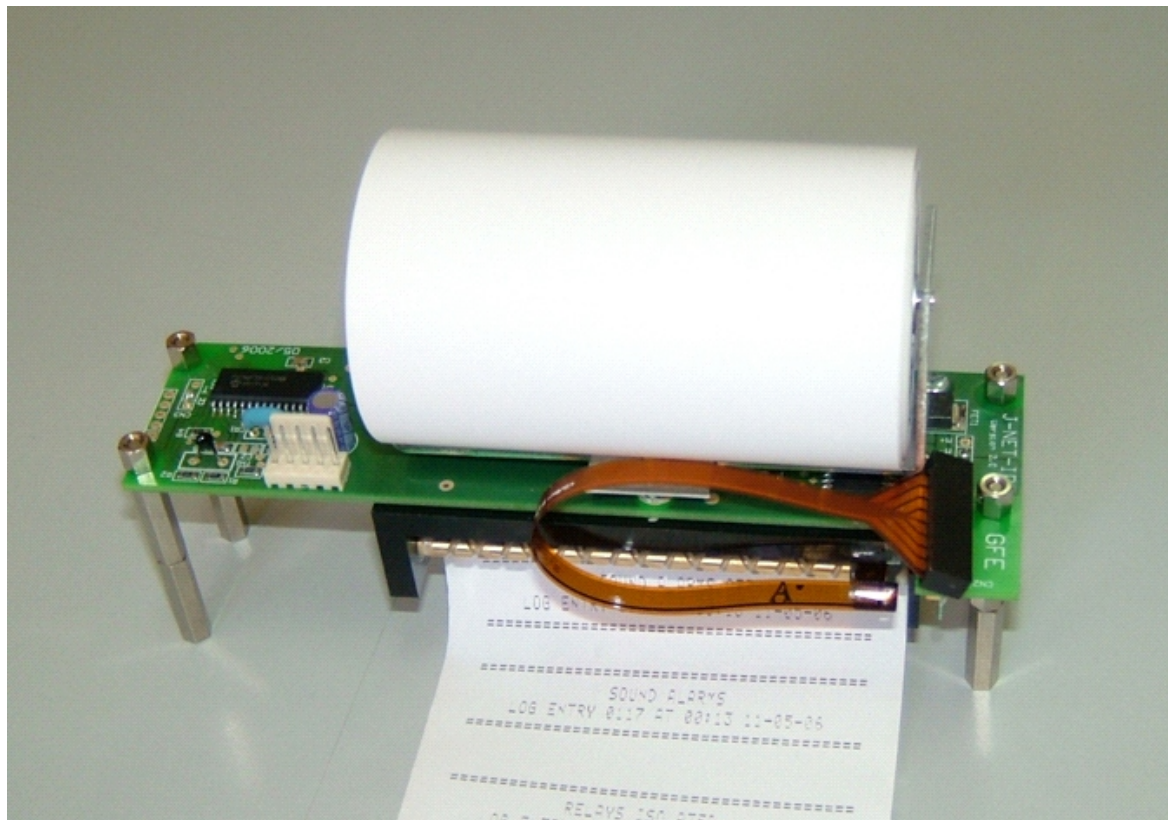

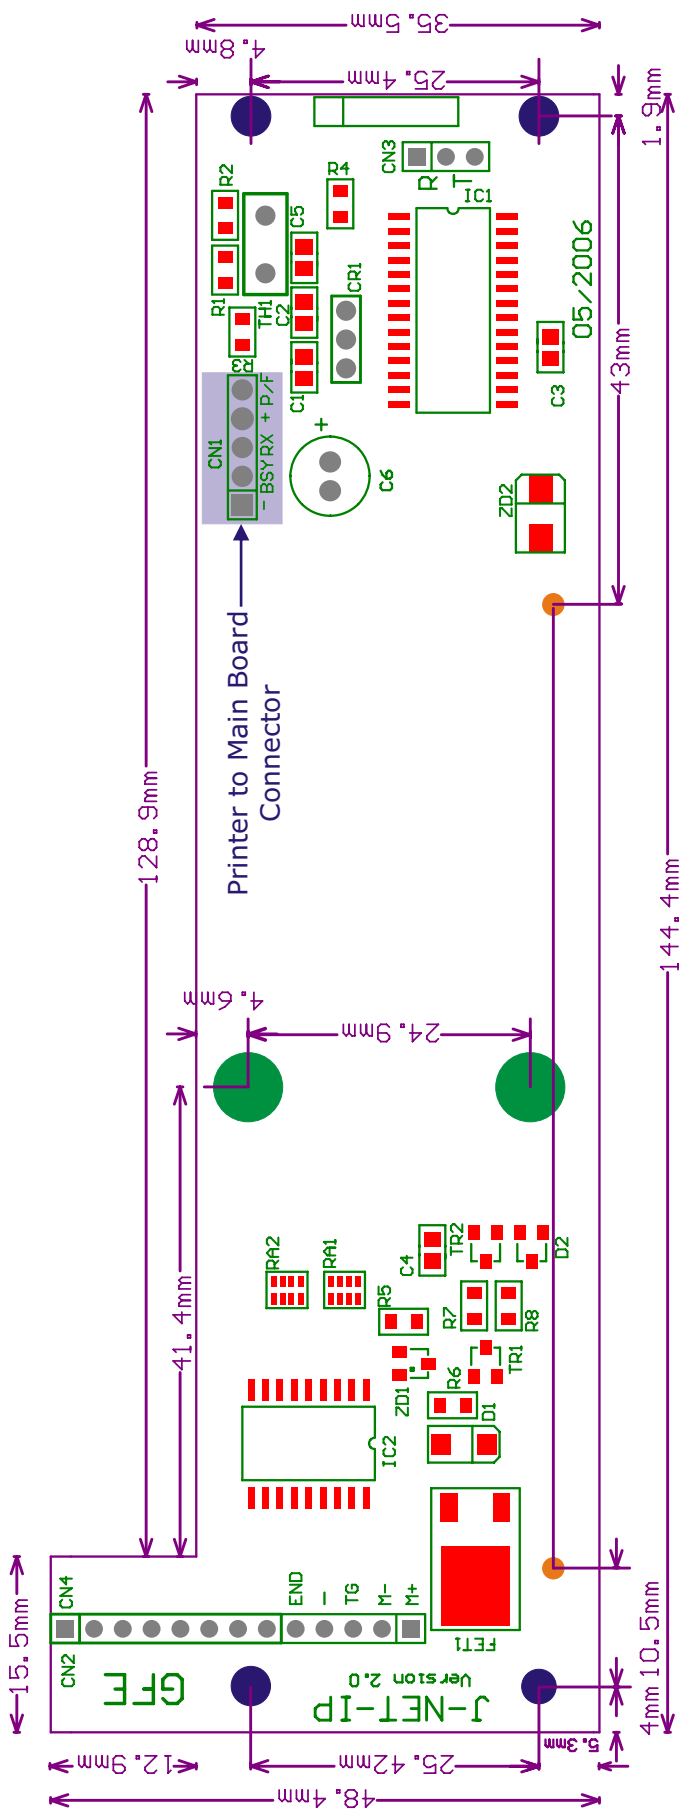

- Fixing Holes for Paper Roll Frame
- Fixing Holes for Printer PCB
- Fixing Holes for Printer Mechanism

