



QUAD-ZMU

ma_quadzmu_01_010001_en_190122



Addressable QUAD Zone Monitoring Unit

MADE IN PORTUGAL - EU

GLOBAL FIRE EQUIPMENT S.A.

Sítio dos Barrabás, Armazém Nave Y, Caixa Postal 908-Z, 8150-016 São Brás de Alportel - PORTUGAL


Tel: +351 289 896 560 • Sales: sales@globalfire.pt • Technical Support: techs@globalfire.pt • www.globalfire.pt

TECHNICAL SPECIFICATIONS

SUPPLY VOLTAGE / LOOP CURRENT	20 V to 30 V DC (External Supply) / 1.6 mA
EXT. SUPPLY CURRENT @ 24VDC	W/ Active EOL: 5.3 mA Quiescent - per zone OC / SC / FIRE - 7 / 33 / 23 mA W/ Resistive EOL: 24 mA Quiescent - per zone OC / SC / FIRE - 4 / 37 / 13.5 mA
MAX. CABLE SIZE / COLOUR / CASE MATERIAL	2.5 mm ² / White & Transparent / ABS & PC
OPER. TEMPERATURE / MAX. HUMIDITY	-10°C to 50°C / 95% RH Non-Condensing
DIMENSIONS / WEIGHT	150 (W) x 90 (L) x 32 (H) mm / 220 g - boxed

ORDER CODE	CERTIFICATE	DESCRIPTION
QUAD-ZMU 1Z	1328-CPR-0575	ADDRESSABLE 1 CONVENTIONAL ZONE MONITORING UNIT
QUAD-ZMU 2Z	1328-CPR-0579	ADDRESSABLE 2 CONVENTIONAL ZONES MONITORING UNIT
QUAD-ZMU 3Z	1328-CPR-0578	ADDRESSABLE 3 CONVENTIONAL ZONES MONITORING UNIT
QUAD-ZMU 4Z	1328-CPR-0577	ADDRESSABLE 4 CONVENTIONAL ZONES MONITORING UNIT

CONNECTIONS

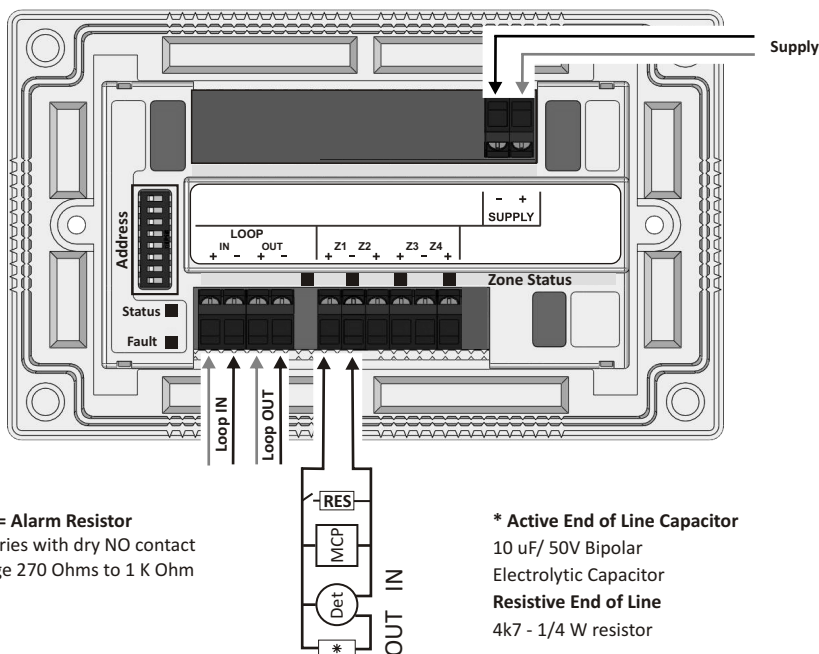

NOTE: Maximum 32 conventional devices per zone (max. 9 mA total quiescent consumption allowed per zone)

ADDRESSING D.I.L. SWITCH CONFIGURATION



Switches 1-7 - Used to configure the module's address.

Switch 8 - OFF: Active End of Line / ON: Resistive End of Line.

(Special function on Programming Mode. More details at Programming Manual available at our website).

FIRST ADDRESS SETTING

01	02	03	04	05	06	07	08
09	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96
97	98	99	100	101	102	103	104
105	106	107	108	109	110	111	112
113	114	115	116	117	118	119	120
121	122	123	124	125	Depends on the model: 4 Zone address until 122 3 Zone until 123 2 Zone until 124 1 Zone until 125		

